

IF9318 TORSO ROTATION OWNER'S MANUAL

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

mportant Safety Instructions	3
nstructions	5
exploded View and Parts List	6
leasurement Guide	13
Assembly Instructions	- 14
Assembly	- 15
Adjust Instructions and Exercise Instructions	26
laintenance Schedule	27
General Maintenance Information	28
Veight Training Tips	29

Please assemble according to the actual **Weights** you buy!

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

 These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.6 meters space around the product.

 Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

 Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

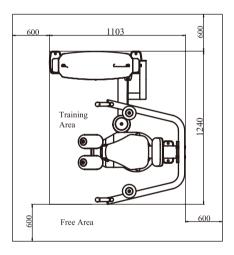

Specifications

Class: S

Maximum Wt. Capacity: 134kg/ 295lbs

Maximum User Weight: 150kg/ 330lbs

Product Dimension: 1103*1240*1529mm

Product Total Surface: 1103*1240mm


Product Total Mass: 96kg/212lbs

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

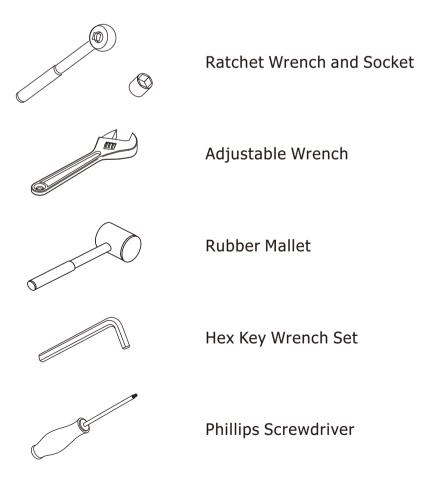


Overall

<u>ItemNo.</u>	Grade No.		Description	QΤ
1	1	IF931801ASSY	Main Frame ASSY	1
2	2	IF931802ASSY	Wheel Frame ASSY	1
3	3	IF931803ASSY	Seat Pad Frame ASSY	1
4	4	IF931804ASSY	Rotate Frame ASSY	1
5	5	IF931805ASSY	Arm Frame ASSY	1
6	6	IF931806ASSY	Bottom bracket Frame ASSY	1
7	7	IF93185600	Cable ASSY	1
8	8	IF93182000	Cover Plate	1
9	9	IF93182100	FOAM	2
10	10	IF81023500V4	FOAM	2
11	11	IF93015200	Seat Pad	1
12	12	IT93041300V1	Arm Pad	1
13	13	IF930101ASSY	Weight Stack Frame ASSY	1
14	14	IF93012100	Top Bracket	2
15	15	IF930122ASSY	Bottom Bracket ASSY	1
				1
16	16	IF93013100	Training Placard Cover	_
17	17 18	IF93013200	Top Cover	1
18 19	19	IF93013300	Right Plug	1 1
		IF93013400	Left Plug	
20	20	IT95014200	Top Plate	1
21	21	IT95014400	Guide Rod Φ19*1242	2
22	22	IT95015500	Top Rear Shroud	1
23	23	IT95015600	Rear Shroud	1
24	24	IT95016400	Pulley Cover	<u>3</u>
25	25	SG500110400V5	4.5" Pulley (Spacer)	
26	26	IT80023000	Weight Rubber Bumper	
27	27	IT90012000V1	Selector Pin W/Coil	1
28	28	IT95016100	Guide Rod Fixing SleeveΦ25*Φ19*45	2
29	29	HFOPT900-04A0602	Spring Φ15.5*Φ1.5*36	2
30	30	GB5780M10*75DS20	Hex Head Bolt M10*75	10
31	31	GB5780M10*50DS20	Hex Head Bolt M10*50	4
32	32	GB70M10*50DS20	Socket Head Cap Screw M10*50	1
33	33	GB818M6*20*20DN19	Cross Recessed Pan Head Screw M6*20	18
34	34	GB818M6*10DS19	Cross Recessed Pan Head Screw M6*10	4
35	35	GB9510DS2	Flat Washer Φ11*Φ20*2	47
36	36	NM10DS2	Nylon Lock Nut M10	18
37	37	IF81022000PBC	FOAM Cap Φ56	4
38	38	HF1652100	Plastic Bumper Φ60	8
39	39	PNLM10*30*30DS20	Button Head Cap Screw M10*30	4
40	40	IT95057800	4.5" Pulley	1
41	41	XL2-17001900	SPACER Ф35*Ф25.4*16.7	1
42	42	IT95091400	Cable Connect Frame	$\frac{1}{1}$
43	43	FE97122100	SPACER Ф22*17.5*7.5	1
44	44	FE97122300	Threaded Column M8*30	1
45	45	GB70BTM10*60DS18	Socket Head Cap Screw M10*60	1
46	46	GB5780M10*120DS20	Hex Head Bolt M10*120	2
47	47	GB5780M10*30DS20	Hex Head Bolt M10*30	9
48	48	YDQ13.5*35*2DS2	Flat Washer 13.5*35*2	2
				2
49	49	NM12DS2	Nylon Lock Nut M12	_
50	50	DQ10N19B	Flat Washer Ф11*Ф25*2	1
51	51	GB70M10*25DS20NL	Socket Head Cap Screw M10*25	1 1
52	52	GB956DS2	Flat Washer Ф6.6*Ф12*1.6	2
53	53	PNLM6*20DS 20	Button Head Cap Screw M6*20	2
54	54	GB9310DS12	Spring Washer Φ10	5

Overall

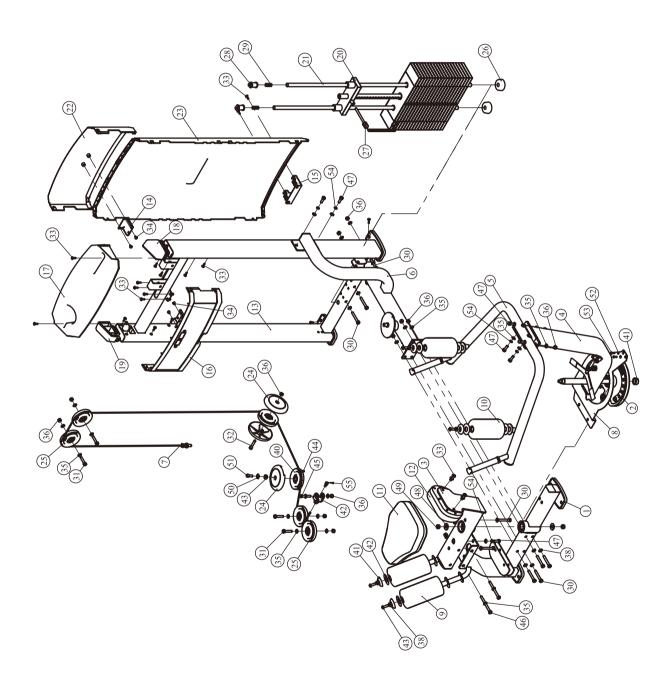


Main Frame ASSY

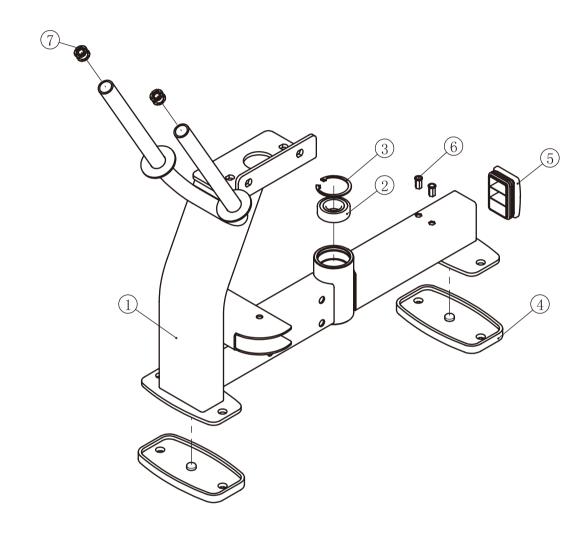

ItemNo.	Grade No.	Part No.	Description	QTY
1	1.1	IF93180100	Main Frame	1
2	1.2	GB2766205-2ZC3	Deep Groove Ball Bearing Φ25*Φ52*15	1
3	1.3	GB893.152FH12	Circlip For Hole	1
4	1.4	BS81223100	Foot Plate	2
5	1.5	KPSFID2800	Plug □50.8*76.2	1
6	1.6	GB17880.5M6*16.5DS17	Rivet Nut M6	2
7	1.7	IF81165000	Lock Nut	2

Wheel Frame ASSY

Seat Pad Frame ASSY

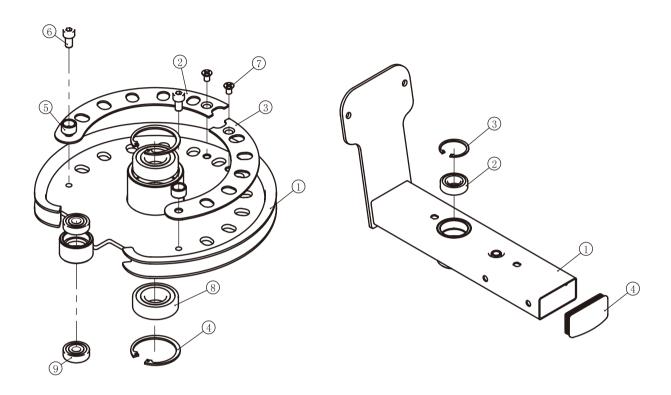


ItemNo.	Grade No.	Part No.	Description	QTY
1	2.1	IF93180200	Wheel Frame	1
2	2.2	IF93181900	Lining Board	1
3	2.3	IF93182300	Lining Board B	1
4	2.4	GB893.152FH12 Circlip For Hole		2
5	2.5	IN-S10111200	Rubber Sleeve Ф17*10.5	2
6	2.6	GB70M8*15DS20NL	Hexagon Socket Head Cap Screw M8*15	2
7	2.7	GB819M6*10DS2	Philips Countersunk Screw M6*10	2
8	2.8	GB2766205-2ZC3 Deep Groove Ball Bearing Φ25*Φ52*15		2
9	2.9	GB2766200-2ZC3	Deep Groove Ball Bearing	2

ItemNo.	Grade No.	Part No.	Description	QTY
1	3.1	IF93180300	Seat Pad Frame	1
2	3.2	GB2766205-2ZC3	Deep Groove Ball Bearing Φ25*Φ52*15	1
3	3.3	GB893.152FH12	Circlip For Hole	1
4	3.4	VLP8000	Plug □50*100	1

Rotate Frame ASSY

Adjust Handle Frame ASSY

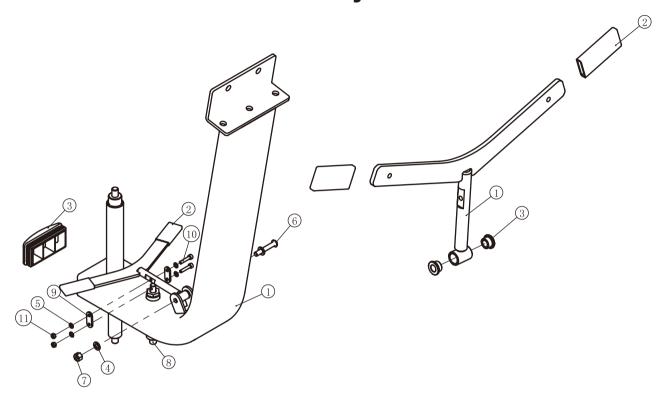


ItemNo.	Grade No.	Part No.	Description	QTY
1	4.1	IF93180400	Rotate Frame	1
2	4.2	IF931807ASSY	Adjust Handle Frame ASSY	1
3	4.3	VLP8000	Plug □50*100	1
4	4.4	GB958DS2	Flat Washer Φ9*Φ16*1.6	2
5	4.5	PNLM8*50DS2	Pan Head Cap Screw M8*50	1
6	4.6	NM8DS2	Nut M8	1
7	4.7	CWRVL0051500V1	Pin	1
8	4.8	CWRVL0272600	Connecting Link	2
9	4.9	GB955DS2	Flat Washer Φ5.5*Φ10*1	4
10	4.10	GB70M5*25DS20	Socket Head Cap Screw M5*25	2
11	4.11	NM5DS2	Nut M5	2

ItemNo.	Grade No.	Part No.	Description	QTY
1	4.2.1	IF93180700	Adjust Handle Frame	1
2	4.2.2	IN-B72011400Y	Yellow Grip	2
3	4.2.3	P60015700	Bush Φ16*Φ8*8	2

Arm Frame ASSY


Bottom Bracket Frame ASSY

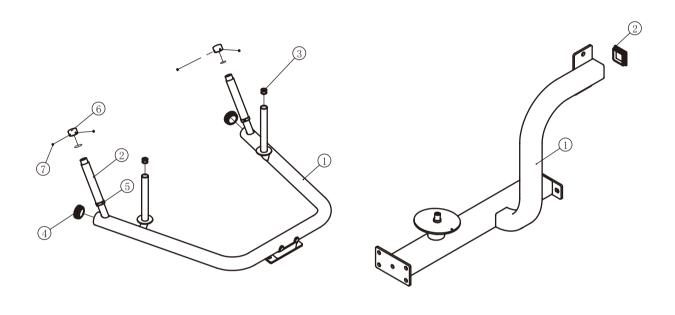


ItemNo.	Grade No.	Part No.	Description	QTY
1	5.1	IF93180500	Arm Frame	1
2	5.2	026-01PL0206-14	Grip STФ30*Ф22*160	2
3	5.3	IF81165000	Lock Nut	2
4	5.4	B10009900	Plug Φ50.8	2
5	5.5	V39500	Aluminium Grip Ring	2
6	5.6	V39600	Aluminium Grip Cap	2
7	5.7	YZGB7710-32*3.2N19	Socket Set Screw	8

ItemNo.	Grade No.	Part No.	Description	QTY
1	6.1	IF93180600	Bottom bracket Frame	1
2	6.2	BNH0012	Plug □50.8	1

Weight Stack Frame ASSY Bottom Bracket ASSY

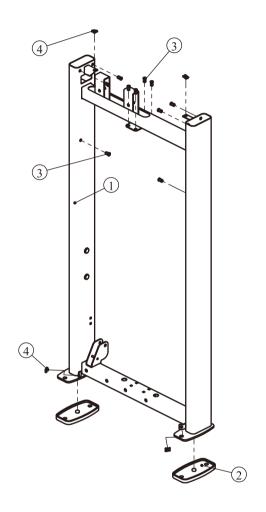


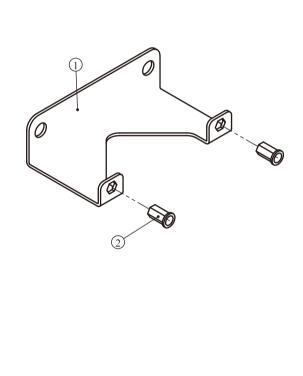

ItemNo.	Grade No.	Part No.	Description	QTY
1	13.1	IF93010100	Weight Stack Frame	1
2	13.2	BS81223100	Foot Plate	2
3	13.3	GB17880.5M6*16.5DS17	Rivet Nut M6	12
4	13.4	AC32705800	U-nut M6	4

ItemNo.	Grade No.	Part No.	Description	QTY
1	15.1	IF93012200	Bottom Bracket	1
2	15.2	GB17880.5M6*16.5DS17	Rivet Nut M6	2

Measurement Guide

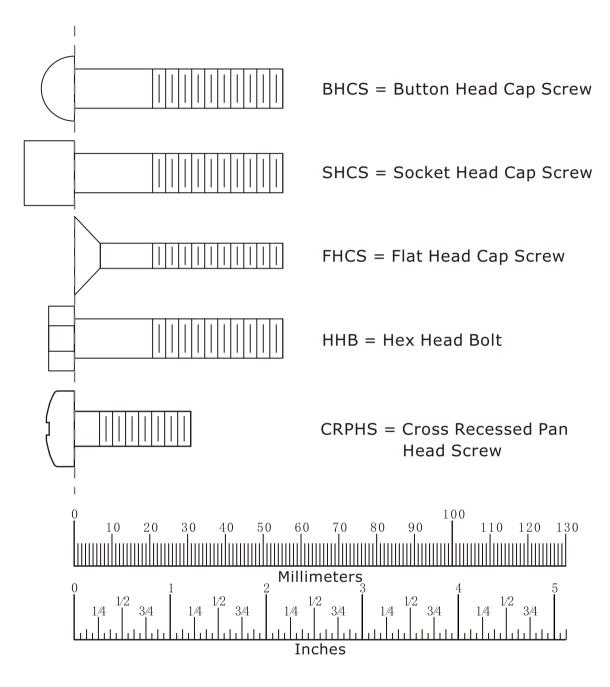

Diameter of bolt (mm/inch)	M6(1/4")	M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for adult men	The strength of the wrist	The strength of the wrist and forearm	The strength of the entire arm	The strength of the arm and upper body	with all strength

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

STEP 1

1. Attach the Main Frame ASSY (#1) and the Bottom bracket Frame ASSY (#6) to the Weight Stack Frame ASSY (#13) using:

six M10*75 HHB (#30) two M10*30 HHB (#47)


fourteen Φ11*Φ20*2 Flat Washer (#35) two Φ10 Spring Washer (#54)

six M10 Nylon Lock Nut (#36)

2. Attach the Wheel Frame ASSY (#2) and the Cover Plate (#8) and the Spacer (#41) to Rotate Frame ASSY (#4), and attach all this to the Main Frame ASSY (#1) using: one Flat Washer 13.5*35*2 (#48) one Nylon Lock Nut M12 (#49).

3. Attach the Cover Plate (#8) to the Main Frame ASSY (#1) using: two Flat Washer $\Phi 6.6 * \Phi 12 * 1.6$ (#52) two Button Head Cap Screw M6*20 (#53)

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

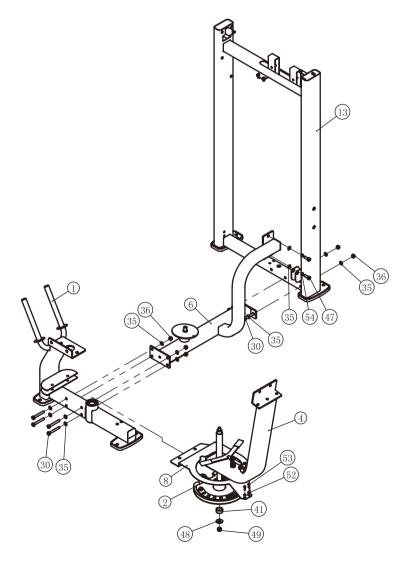

STEP 2

1. Attach the Seat Pad Frame ASSY (#3) to the Main Frame ASSY (#1) using:

two M10*120 HHB (#46) one M10*30 HHB (#47)

five $\Phi 11^* \Phi 20^* 2$ Flat Washer (#35) one $\Phi 10$ Spring Washer (#54)

two M10 Nylon Lock Nut (#36) one Flat Washer 13.5*35*2 (#48)


one Nylon Lock Nut M12 (#49)

2. Attach the Arm Frame ASSY (#5) to the Rotate Frame ASSY (#4) using:

four M10*30 HHB (#47) $\sin \Phi 11*\Phi 20*2$ Flat Washer (#35)

two Φ10 Spring Washer (#54) two M10 Nylon Lock Nut (#36)

Note: Wrench Tighten Bolts and Nylon Lock Nuts.

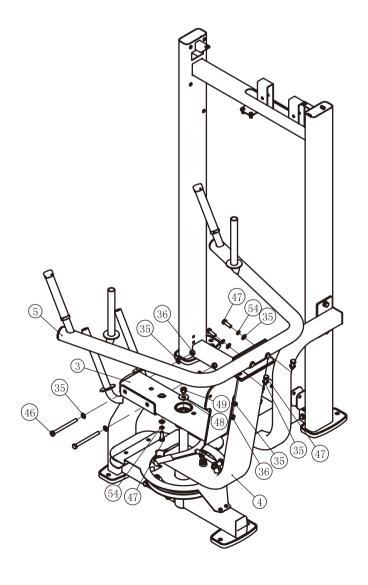

STEP 3

TIPS: Firstly, attach one end of the Cable ASSY (#7) to the Wheel Frame ASSY (#2). Before attach the 4.5" Pulley to the frame, you should lead the other end of the Cable ASSY (#7) across it.

1. Attach two 4.5" Pulley (Spacer) (#25) to the Main Frame ASSY (#1) using: two M10*50 HHB (#31) two M10 Nylon Lock Nut (#36) four Φ 11* Φ 20*2 Flat Washer (#35)


2. Attach one 4.5" Pulley (#40) to the Bottom bracket Frame ASSY (#6) using: one M10*25 SHCS (#51) one Pulley Cover (#24) one Pulley Spacer 1 (#43) one Φ 11* Φ 25*2 Flat Washer (#50)

3. Attach three 4.5" Pulley (Spacer) (#25) and two Pulley Cover (#24) to the Weight Stack Frame ASSY (#1) using:

two M10*50 HHB (#31) one M10*50 SHCS (#32)

four Φ 11* Φ 20*2 Flat Washer (#35) three M10 Nylon Lock Nut (#36)


Note: Wrench Tighten Bolts and Nylon Lock Nuts.

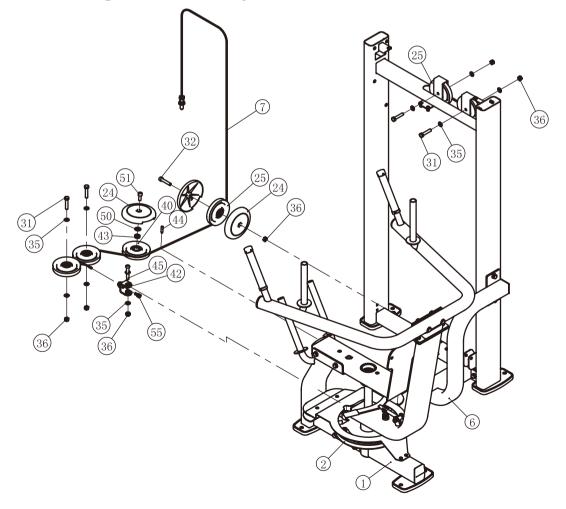

Select STEP

If you install the Front Shroud Attachment (IF93SH01) later, you should to finish the following step firstly.

- 1. Attach eight Plastic Nut to the Weight Stack Frame ASSY (#1).
- 2. Attach the Front Bracket ASSY, Right Bracket ASSY and the Left Bracket ASSY to the Weight Stack Frame ASSY (#1) using: eight ST4.2*16 Cross Disc Self Tapping Screw

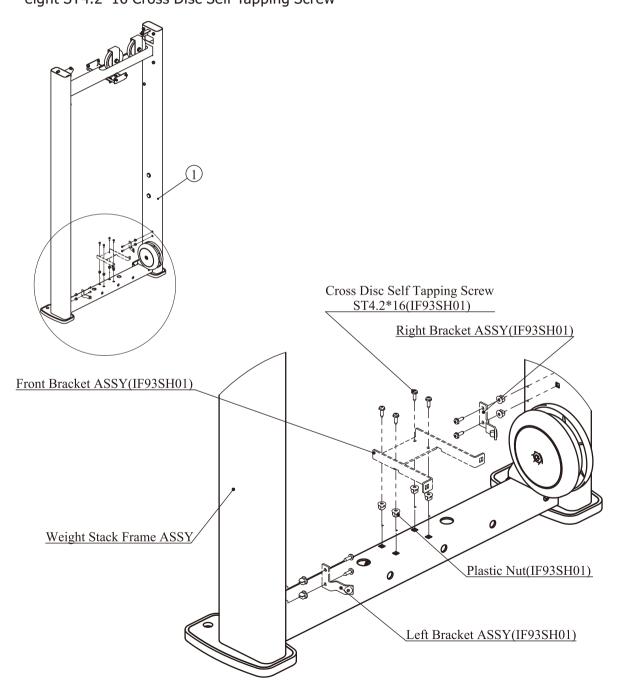


STEP 4

Here is the assembly instruction for 160LBS Weights!

1. Attach:

two Guide Rod Φ 19*1242 (#21) two Weight Rubber Bumper (#26) fifteen Weight Plate 10LBS (#101) two weight stack space (#103) one Top Plate (#20) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#28) two Spring (#29)

- 2. Attach the Selector Pin W/Coil (#27) to the Top Plate (#20).
- 3. Attach the Cable ASSY (#7) to the Top Plate (#20).

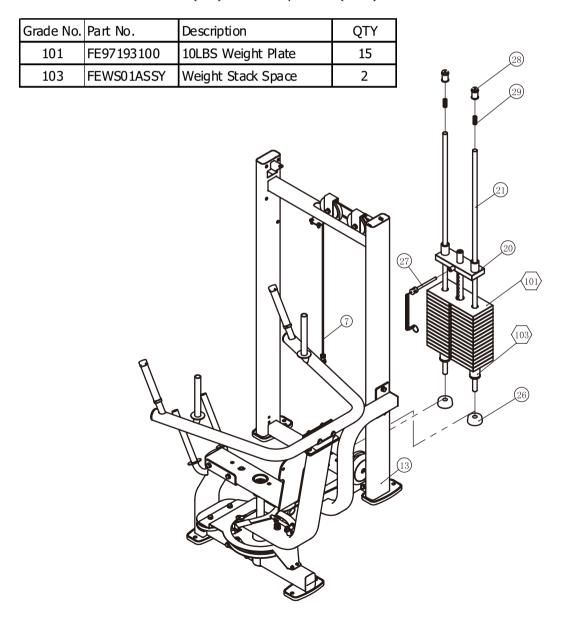

STEP 4


Here is the assembly instruction for 200LBS Weights!

1. Attach:

two Guide Rod Φ 19*1242 (#21) two Weight Rubber Bumper (#26) nineteen Weight Plate 10LBS (#101) one Top Plate (#20) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#28) two Spring (#29)

- 2. Attach the Selector Pin W/Coil (#27) to the Top Plate (#20).
- 3. Attach the Cable ASSY (#7) to the Top Plate (#20).

Grade No.	Part No.	Description	QTY	
101	FE97193100	10LBS Weight Plate	19	

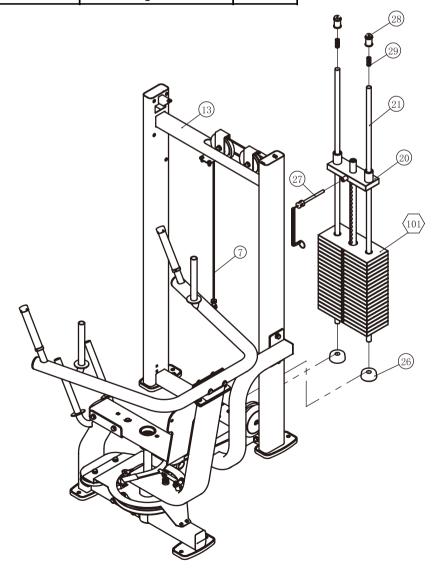


STEP 4

Here is the assembly instruction for 235LBS Weights!

1. Attach:

two Guide Rod Φ 19*1242 (#21) two Weight Rubber Bumper (#26) fifteen Weight Plate 15LBS (#102) two weight stack space (#103) one Top Plate (#20) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#28) two Spring (#29)

- 2. Attach the Selector Pin W/Coil (#27) to the Top Plate (#20).
- 3. Attach the Cable ASSY (#7) to the Top Plate (#20).

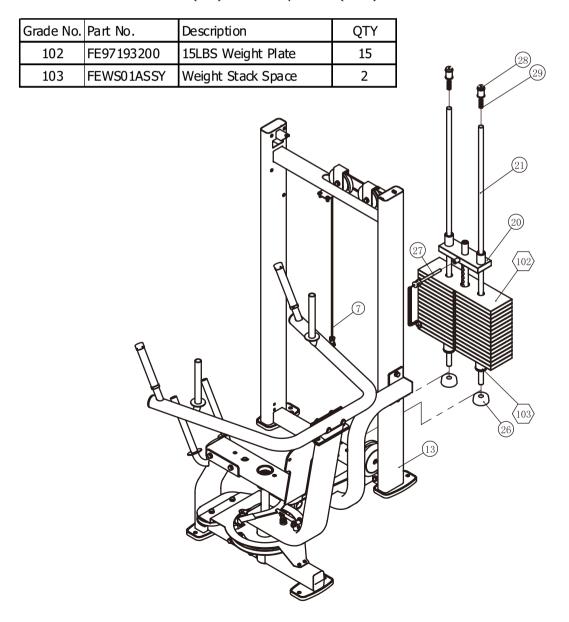

STEP 4


Here is the assembly instruction for 295LBS Weights!

1. Attach:


two Guide Rod Φ 19*1242 (#21) two Weight Rubber Bumper (#26) nineteen Weight Plate 15LBS (#102) one Top Plate (#20) to the Weight Stack Frame ASSY (#1) using: two Guide Rod Fixing Sleeve Φ 25* Φ 19*45 (#28) two Spring (#29)


- 2. Attach the Selector Pin W/Coil (#27) to the Top Plate (#20).
- 3. Attach the Cable ASSY (#7) to the Top Plate (#20).


Grade No.	Part No.	Description	QTY
102	FE97193200	15LBS Weight Plate	19

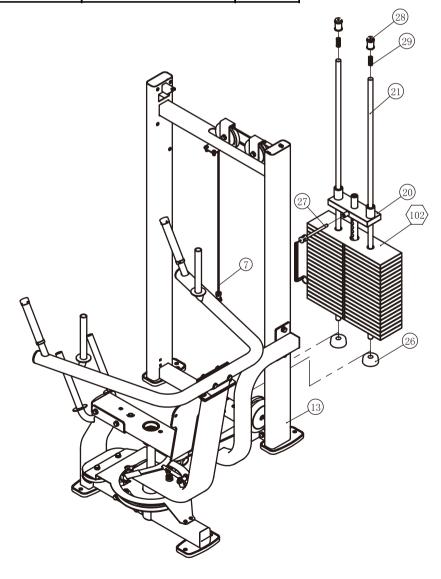

All weight plate sticker paste schematic diagram




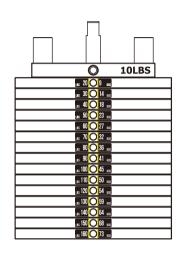


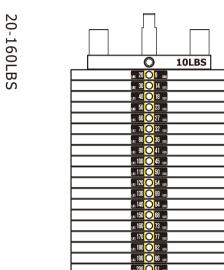

20-200LBS


_{LBS} 25 11 ms _{LBS} 40 18 KGS LBS 55 25 KES 32 KES _{LBS} 70 LBS 85 45 KGS LBS 100 52 KGS LBS 115 _{LBS} 130 59 KGS LBS 145 66 KGS LBS 160 72 Kes LBS 175 79 KGS _{LBS} 190 86 KES LBS 205 93 KGS LBS 220 100 _{kes} LBS 235 107 _{KGS} LBS 250 113_{kss} LBS 265 120 KGS LBS 280 127 KGS LBS 295 134 KGS LBS 310 141 KGS LBS 325 147 KGS

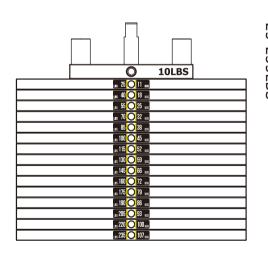

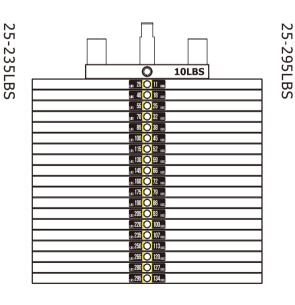

STEP 5

- 1. Attach the Bottom Bracket ASSY (#15) to the Weight Stack Frame ASSY (#1) using: two M10*75 HHB (#30) four Φ 11* Φ 20*2 Flat Washer (#35) two M10 Nylon Lock Nut (#36)
- 2. Attach two Top Bracket (#14) to the Training Placard Cover (#16) and the Top Rear Shroud (#22) using: four M6*10 CRPHS (#34)
- 3. Attach the Rear Shroud (#23) to the Weight Stack Frame ASSY (#1) and the Bottom Bracket ASSY (#15) using: six M6*20 CRPHS (#33)
- 4. Attach the Training Placard Cover (#16) and the Top Rear Shroud (#22) to the Weight Stack Frame ASSY (#1) using: ten M6*20 CRPHS (#33)
- 5. Attach the Right Plug (#18) and the Left Plug (#19) to the Weight Stack Frame ASSY (#1).
- 6. Attach the Top Cover (#17) to the Weight Stack Frame ASSY (#1) using: two M6*20 CRPHS (#33)

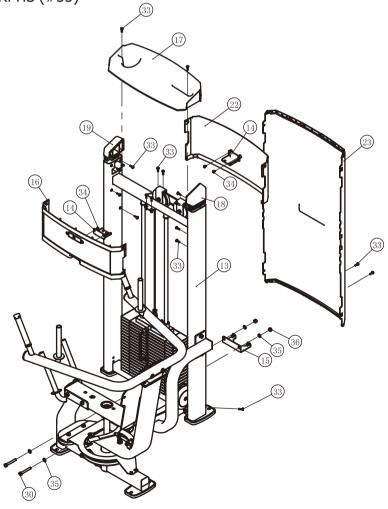

STEP 6

1. Attach the Seat Pad (#11) and the Arm Pad (#12) to the Seat Pad Frame ASSY (#3) using: two M10*75 HHB (#30) two M10*30 HHB (#47)

four Φ11*Φ20*2 Flat Washer (#35)

2. Attach two Foam (#9) to the Main Frame ASSY (#1) using:


two M10*30BHS (#39) two Φ11*Φ20*2 Flat Washer (#35)

two FOAM Cap Φ56 (#37) four Plastic Bumper Φ60 (#38)

3. Attach two Foam (#10) to the Arm Frame ASSY (#5) using:

two M10*30BHS (#39) two Φ11*Φ20*2 Flat Washer (#35)

two FOAM Cap Φ56 (#37) four Plastic Bumper Φ60 (#38)

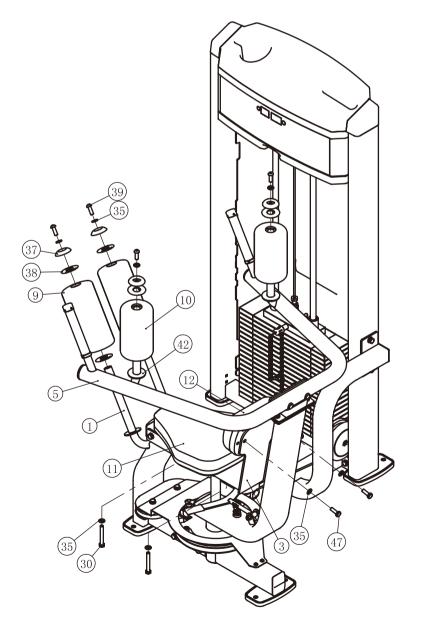


Adjust Instructions and Exercise Instructions

The Ues Position Adjustment

- 1. Pull the Adjustable Support and Adjust the Rotate Frame to the desired position.
- 2. Make sure the pin gets into the hole completely.

The use of Selector Pin W/Coil

- 1. Select an appropriate weight and put the Selector Pin W/Coil into the hole on it.
- 2. Make sure the Selector Pin W/Coil gets into the hole completely.

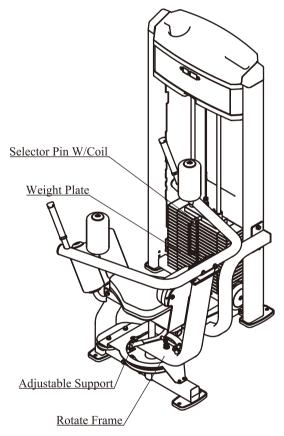

Exercise Instructions



Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







